



tunnel side doubler 4-6 mm hard balsa
TRIM EDGES TO FIT !!!

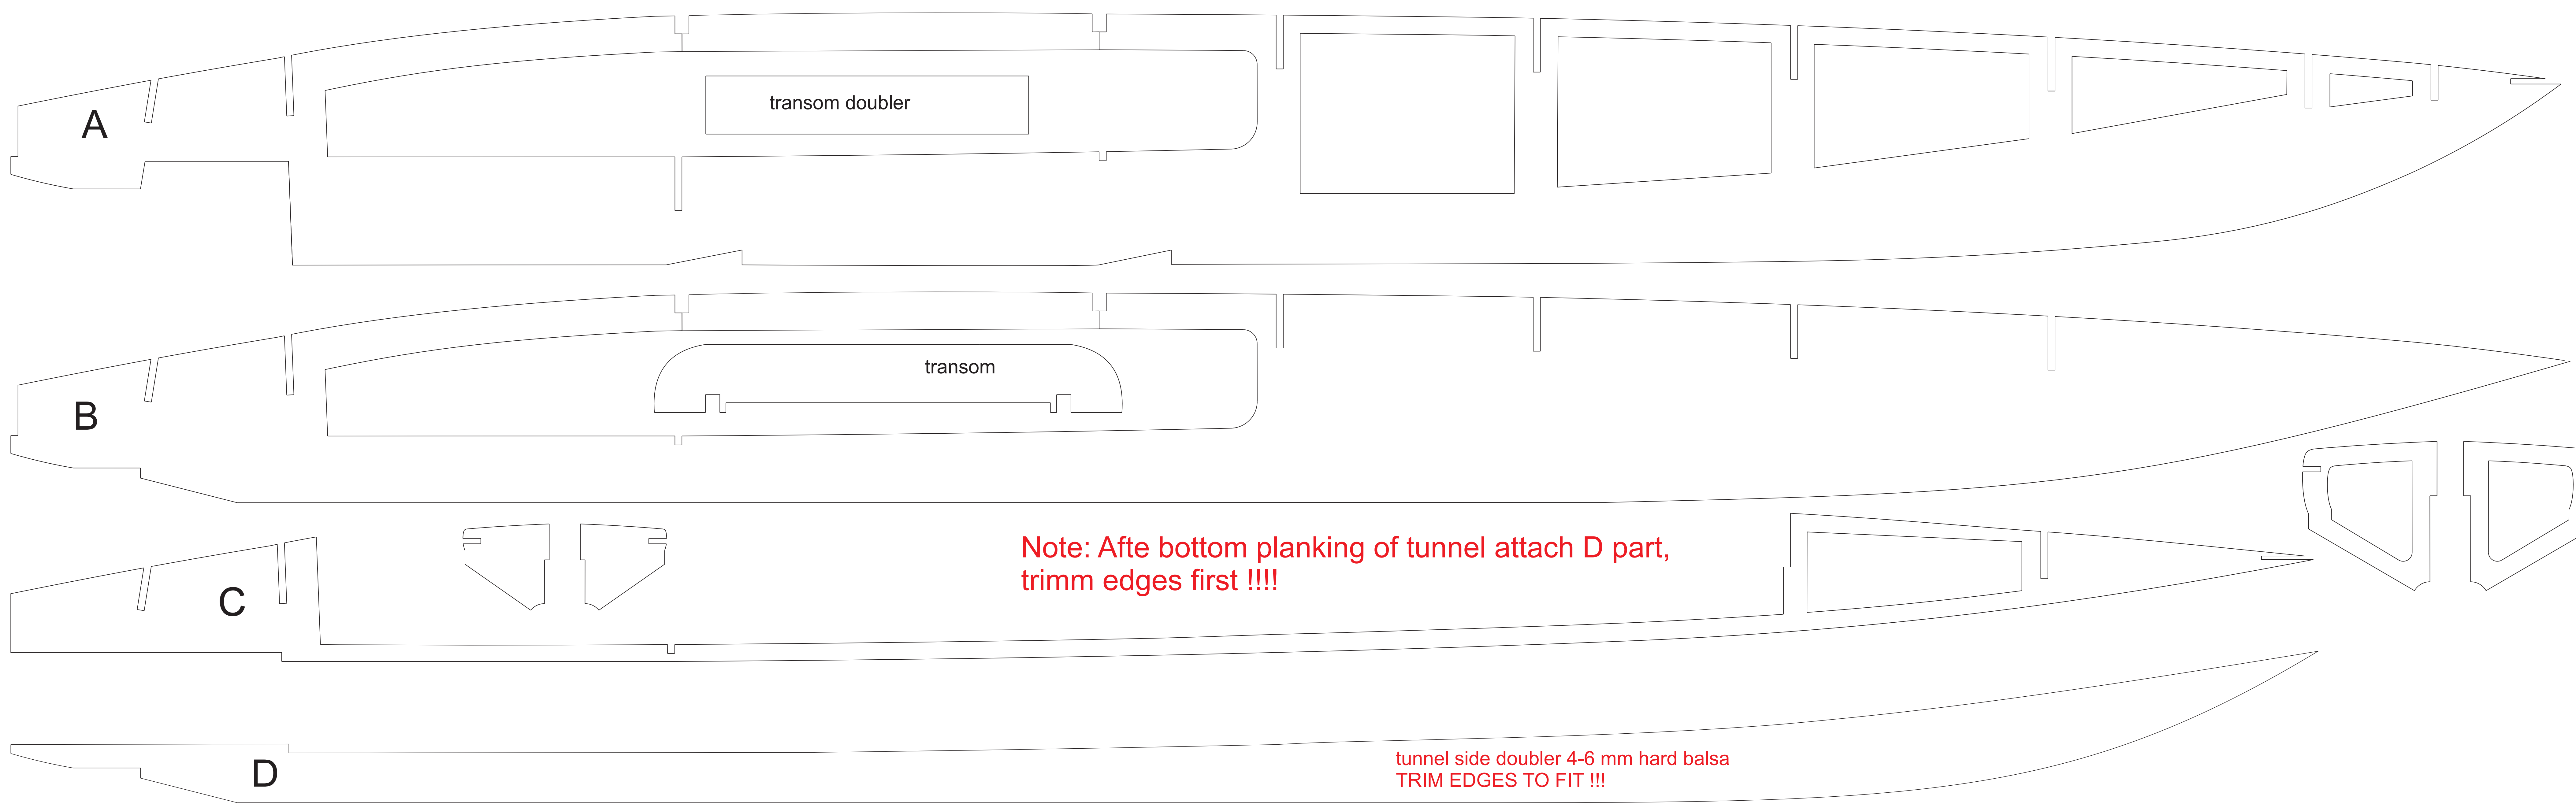

Note: Aft bottom planking of tunnel attach D part,
trimm edges first !!!!

tunnel side doubler 4-6 mm hard balsa
TRIM EDGES TO FIT !!!

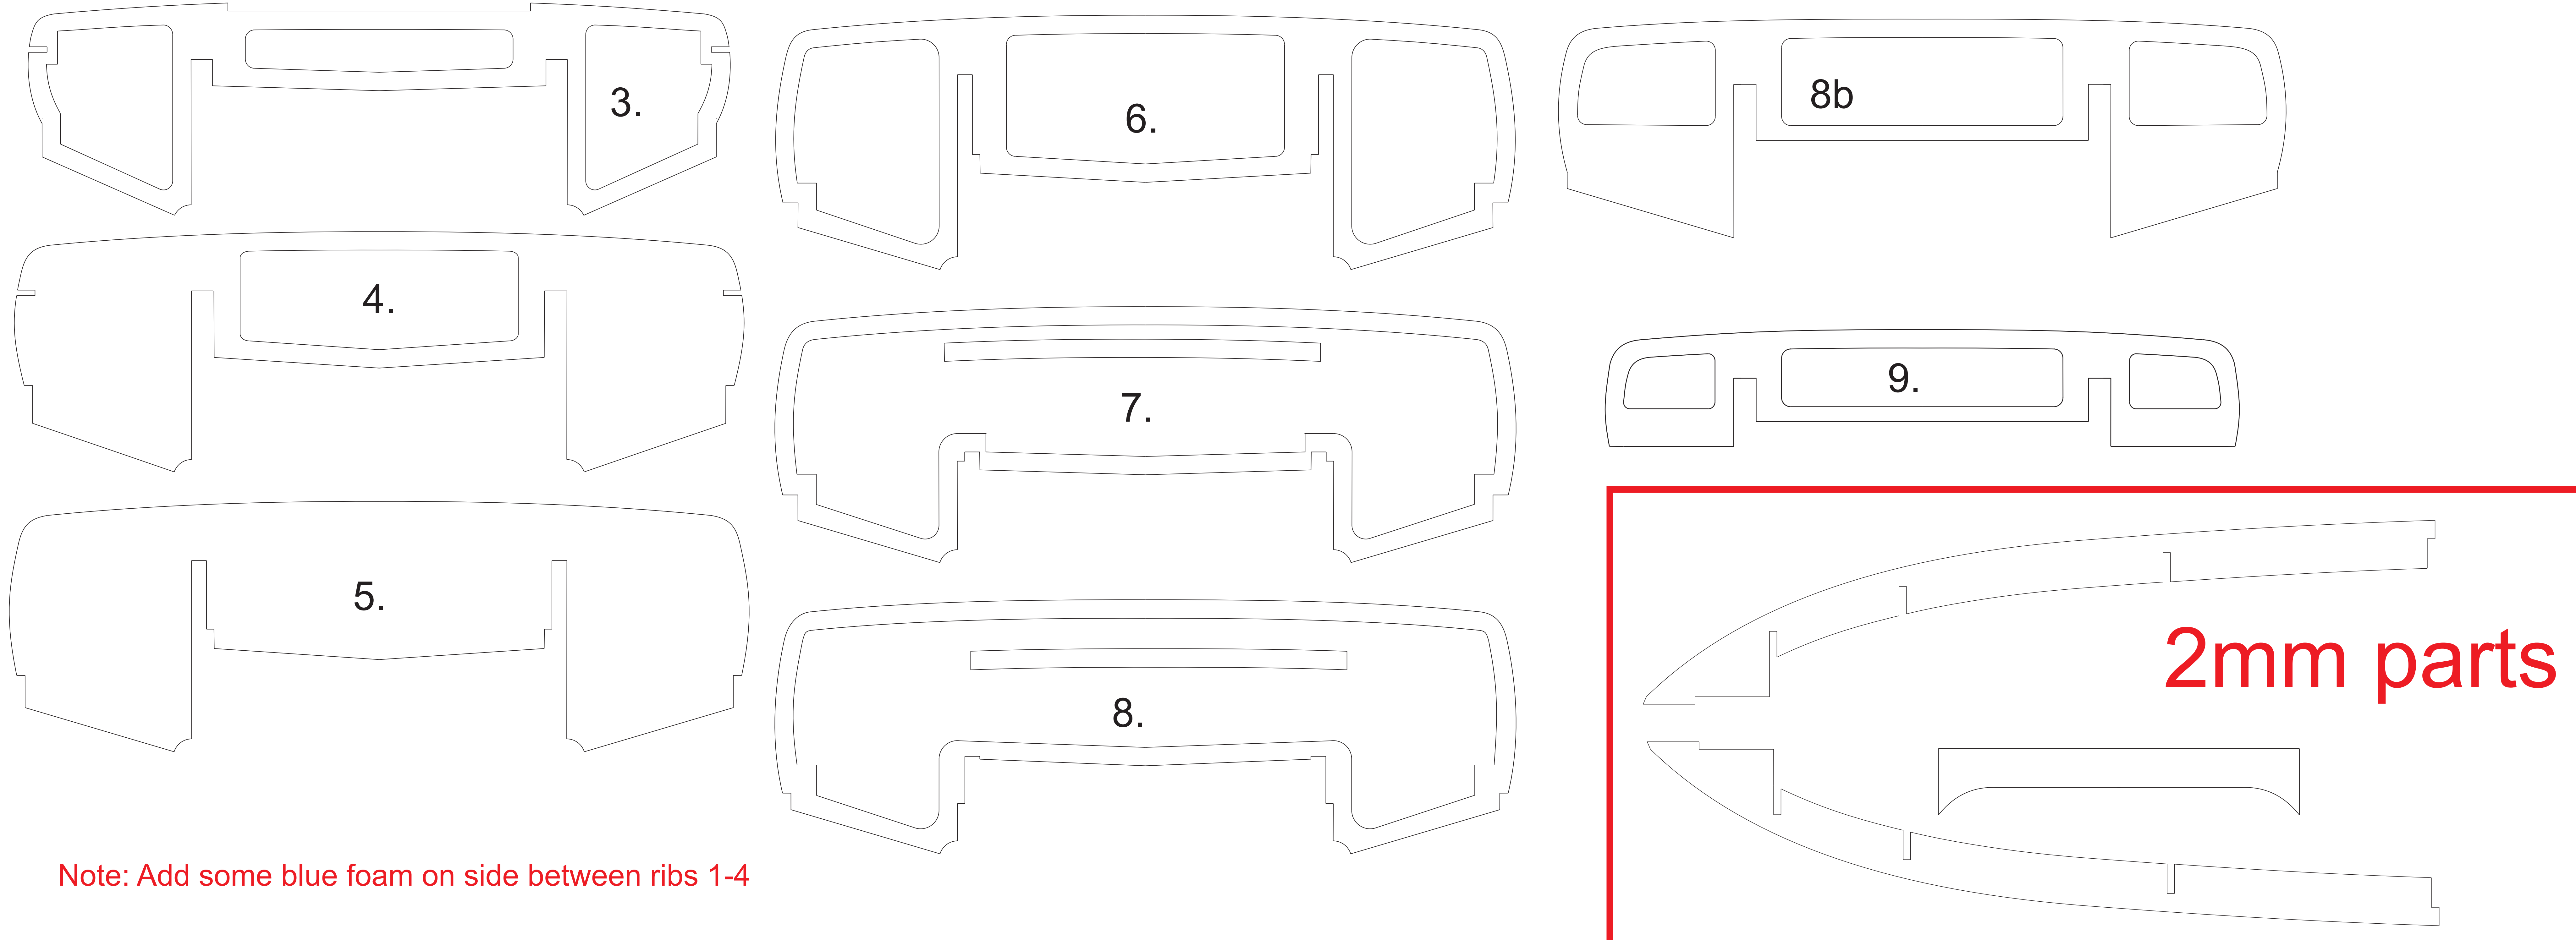

Note: Add some blue foam on side between ribs 1-4

All parts 3mm, except as noticed

Design by: Gasper S, Re edited by: Kruno B

